


# **ALLNET**

## **ALL-CAM2398-Ceiling-50cm**




### **Dimension**

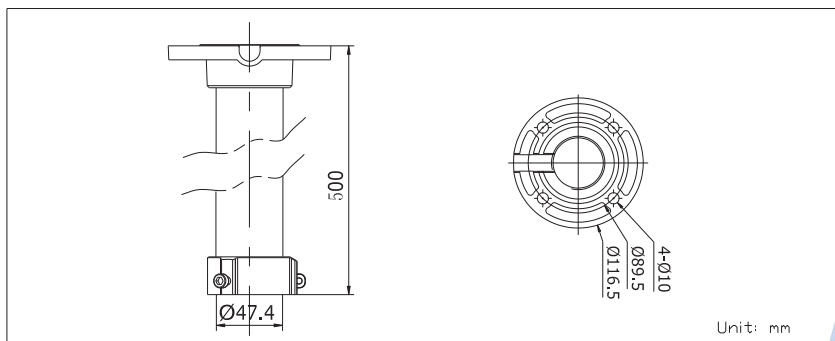


**Art. Nr. 123687**

## Installation steps:


- ② Choose the appropriate wall to mount the ceiling, and rubber blanket should be added when assembling outdoors

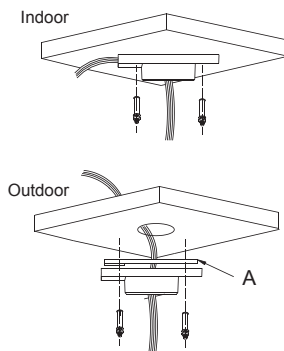


- ② and fix the screwed pipe after Twist threading

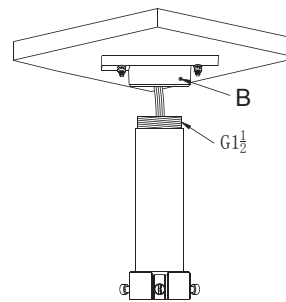

- ③ Fasten the safety rope, thread the line and assemble the speed dome

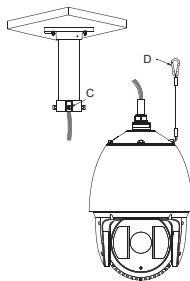

- ④ Fasten the snap joint fixing screw

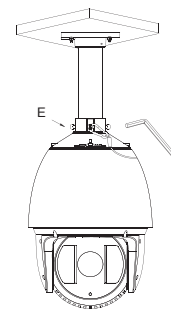

**Note:** The figure of Speed Dome in "Installation Step" is only for your reference; please adhere to our real products.